


Read before installation.

Minimalist luggage racks

# Yamaha T7 Tenere 700 25 -

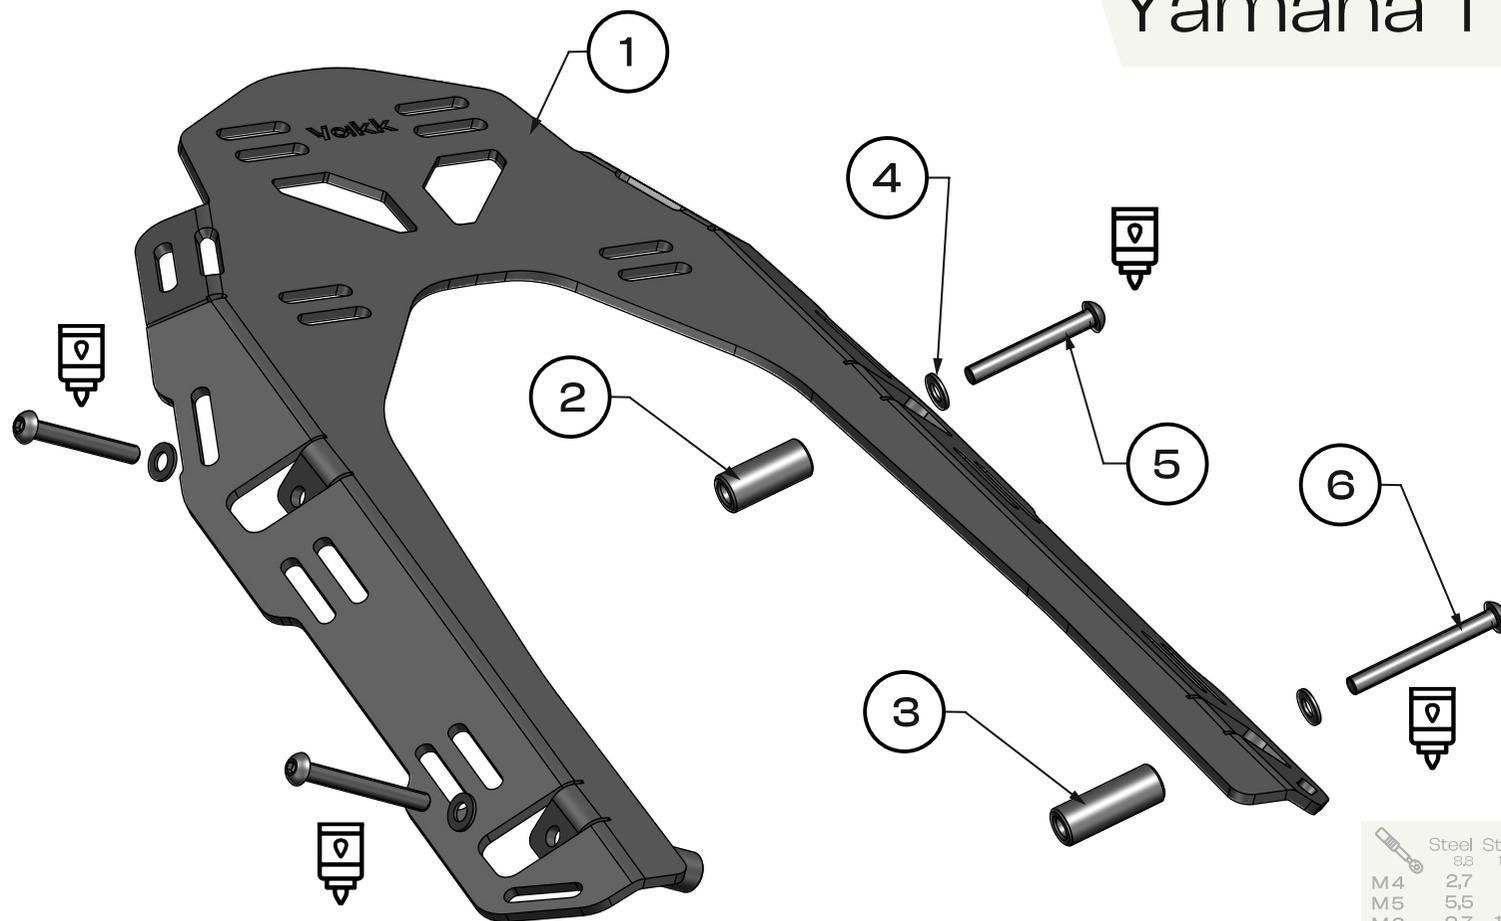

- 1** Luggage 1x


- 2** Spacer sleeve 2x



d9xD17xH39
- 3** Spacer sleeve 2x



d9xD17xH47
- 4** Washer 4x



M8-DIN 125
- 5** Bolt 2x



M8x60-DIN 7380
- 6** Bolt 2x



M8x60-DIN 7380

	Steel 8.8	Steel 10.9	Steel 12.9
M4	2,7	4	4,9
M5	5,5	8	9,8
M6	9,7	13,7	16
M8	23	33	40
M10	47	66	83
M12	80	116	150
M14	130	184	240
M16	196	287	350
M18	270	395	490
M20	385	560	690



Fig. 1

All bolts have to be finally tighten after installation all parts on vehicle.



one person



use a medium-strength



tighten with torque

OEM

Original Equipment Manufacturer

**Yoikk** EXP

assembly instructions

yokkexp.com



**EXPLORE  
POSSIBILITIES**

!!! Use a medium-strength threadlocker on the bolts indicated in the figures

follow  yakkexp join #yakkherd

**Unscrew and remove** all components installed at the indicated locations to allow installation of the spacers and the luggage rack, and then tighten it using the bolts at the specified mounting points. Repeat this procedure on the opposite side of the motorcycle. Install the luggage rack as shown in **[Fig. 2]**, using the components indicated in **[Fig. 3]**.

Install the luggage rack **[1]** as shown in **[Fig. 2]**, using spacer sleeves **[2]** ( $\text{Ø}8 \times \text{Ø}17 \times \text{H}39$  mm) and **[3]** ( $\text{Ø}8 \times \text{Ø}17 \times \text{H}47$  mm), washers **[4]** (M8, DIN 125), and bolts **[5]** (M8  $\times$  60, DIN 7380) and **[6]** (M8  $\times$  70, DIN 7380) as indicated in **[Fig. 3]**. Repeat this procedure on the opposite side of the motorcycle. Use a medium-strength threadlocker.

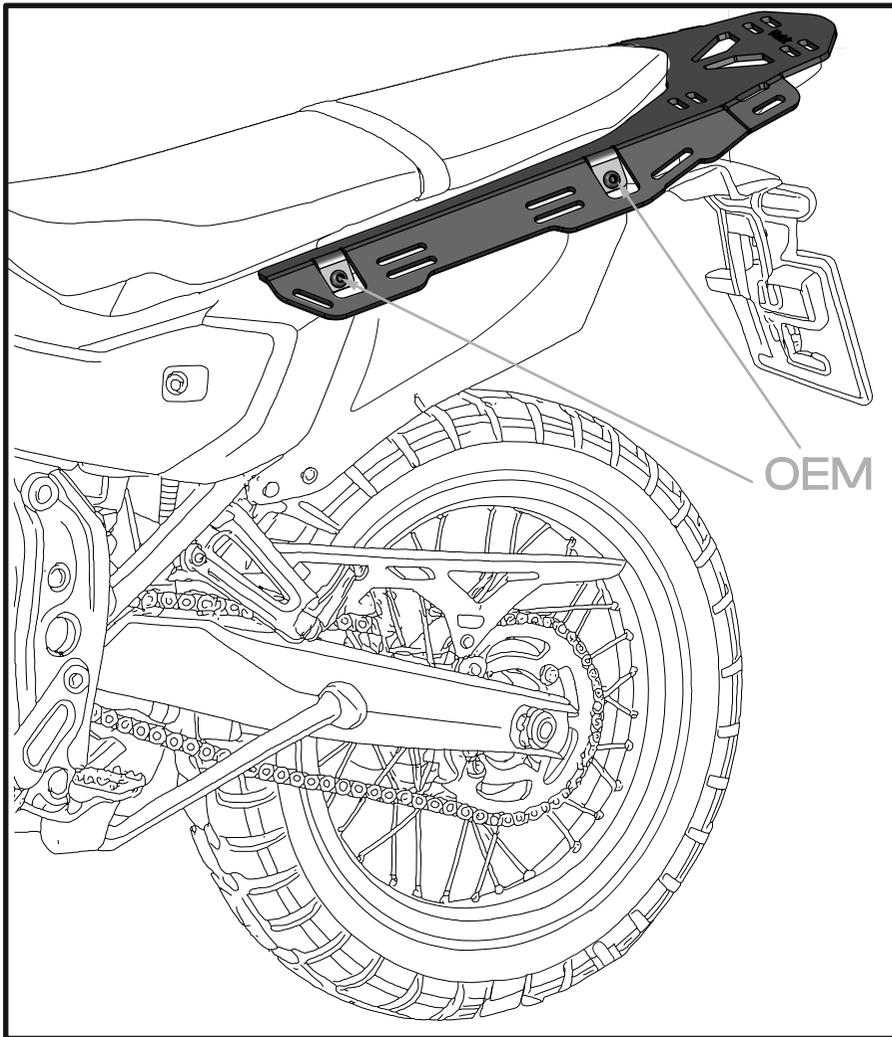


Fig. 2

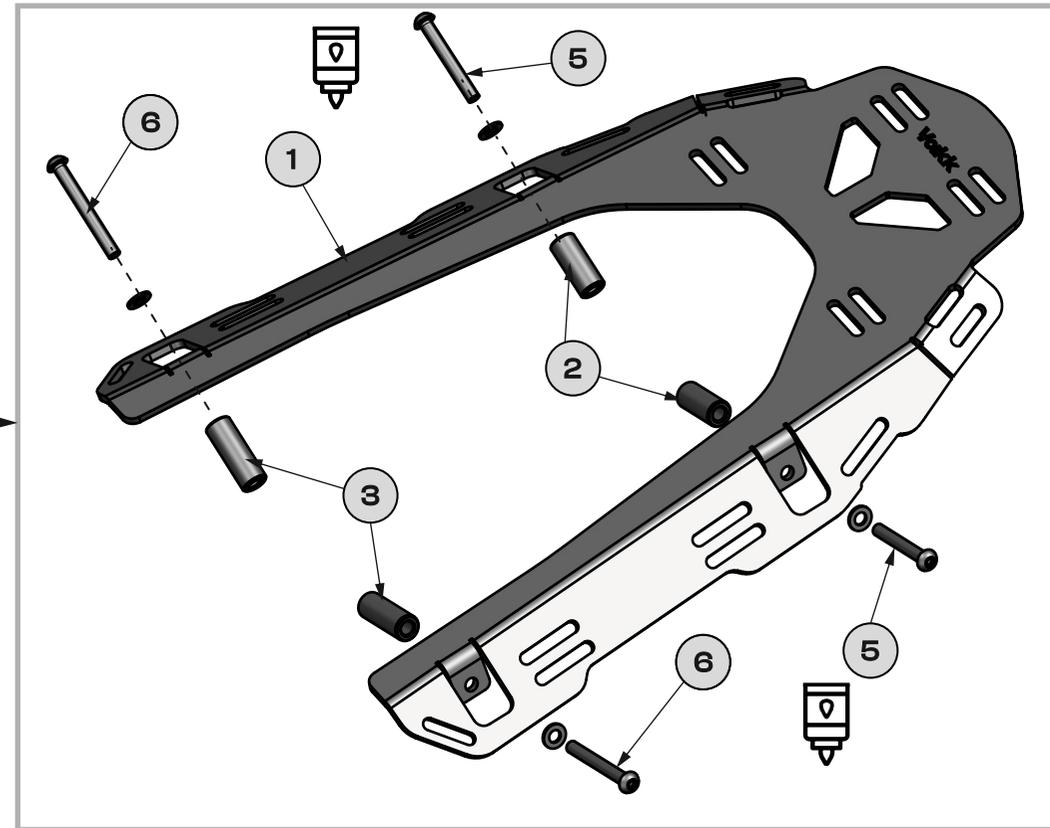


Fig. 3

All bolts have to be finally tighten after installation all parts on vehicle.

